


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR MOST CURRENT INFORMATION.
 2. USE ULTRAPLY TPO QUICKPRIME TO CLEAN AND PRIME TPO MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

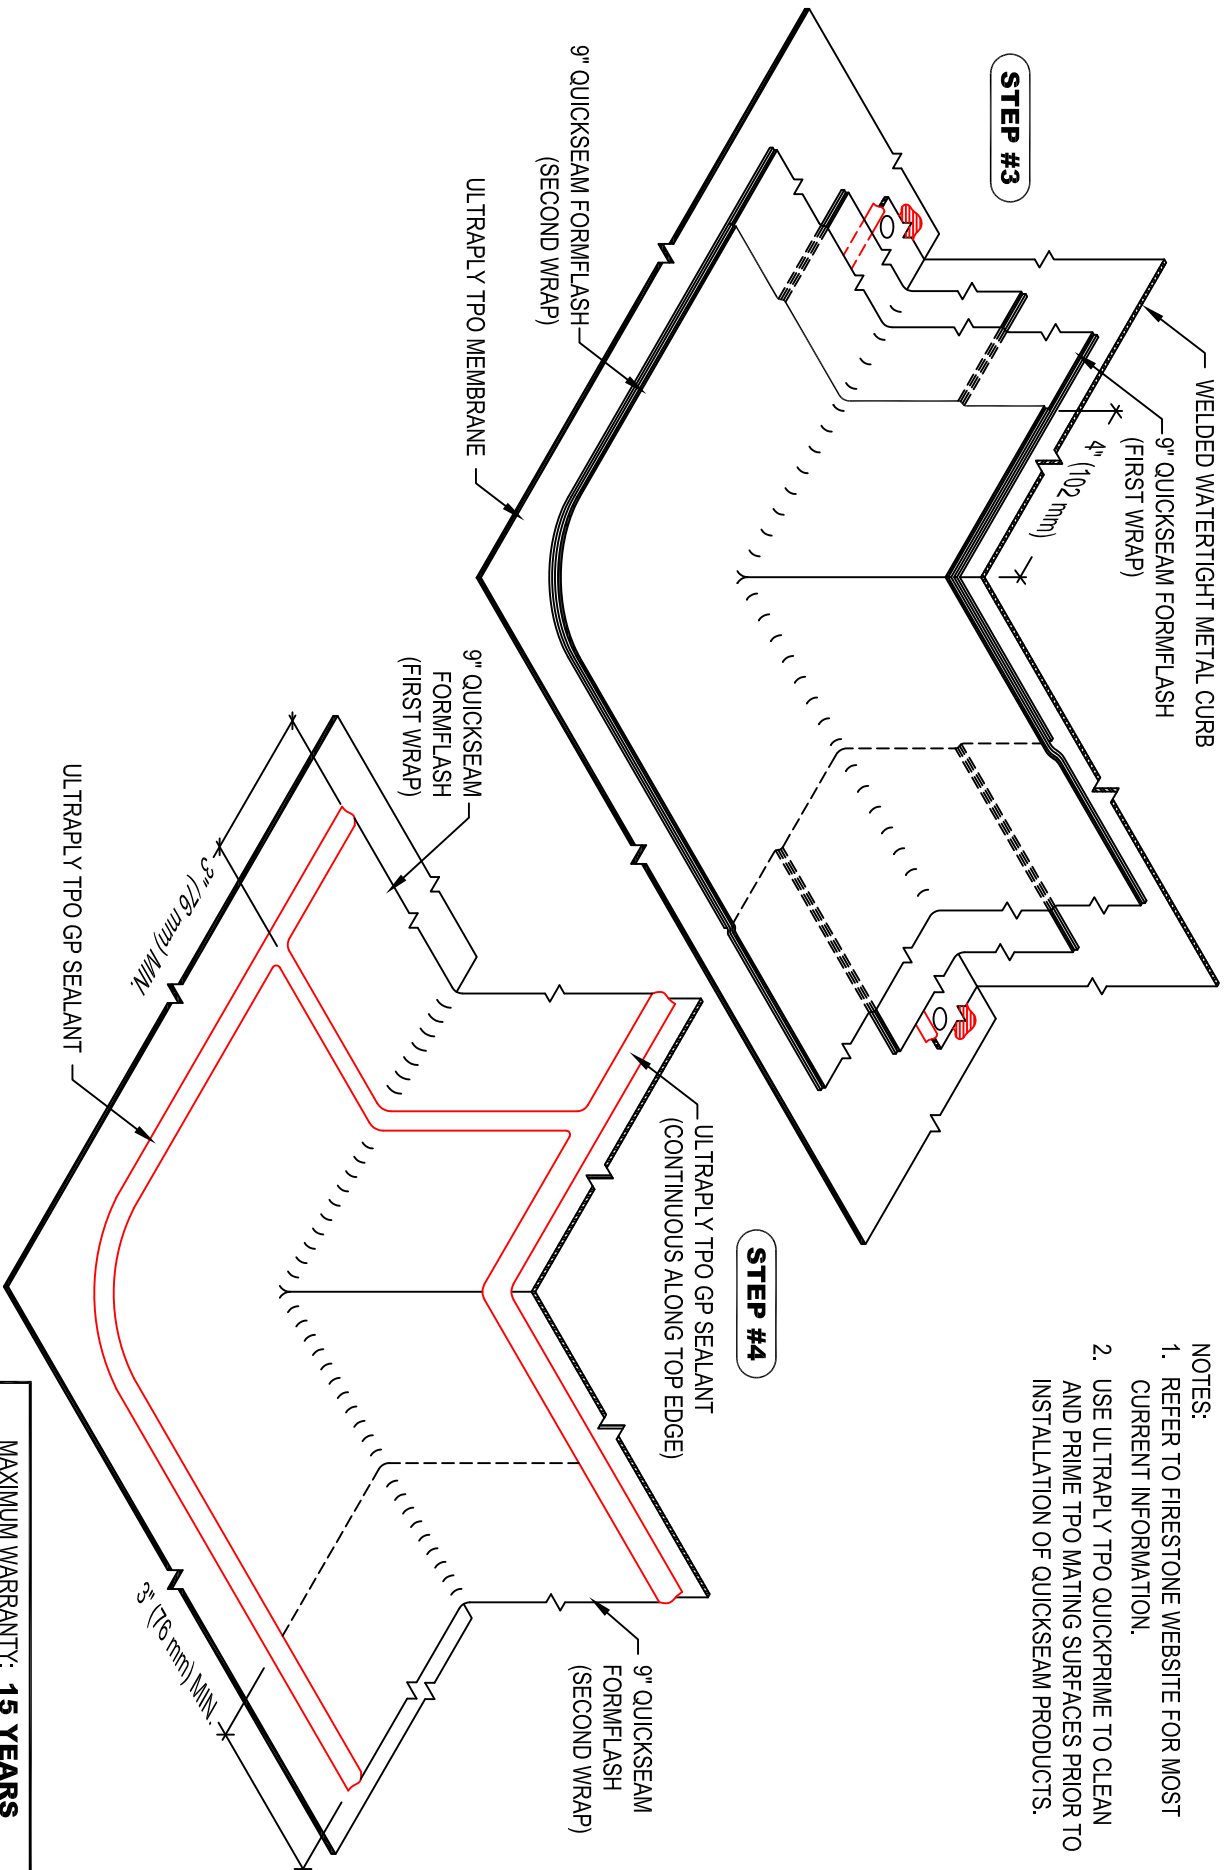

MAXIMUM WARRANTY: **15 YEARS**

ISSUE / REVISION DATE:

7/01/2014

DETAIL NO.

UT-C-2b

OUTSIDE CORNER AT WELDED WATERTIGHT CURB (FLANGES UNDER 2") INSTALLATION STEPS 3 & 4

ULTRAPLY™ TPO

ACCEPTABLE SYSTEMS: ALL

NOT TO SCALE