


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR MOST CURRENT INFORMATION.
  2. REFER TO UT-C-3a OR UT-C-3b FOR INSTALLATION INFORMATION
  3. USE ULTRAPLY TPO QUICKPRIME TO CLEAN AND PRIME TPO MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

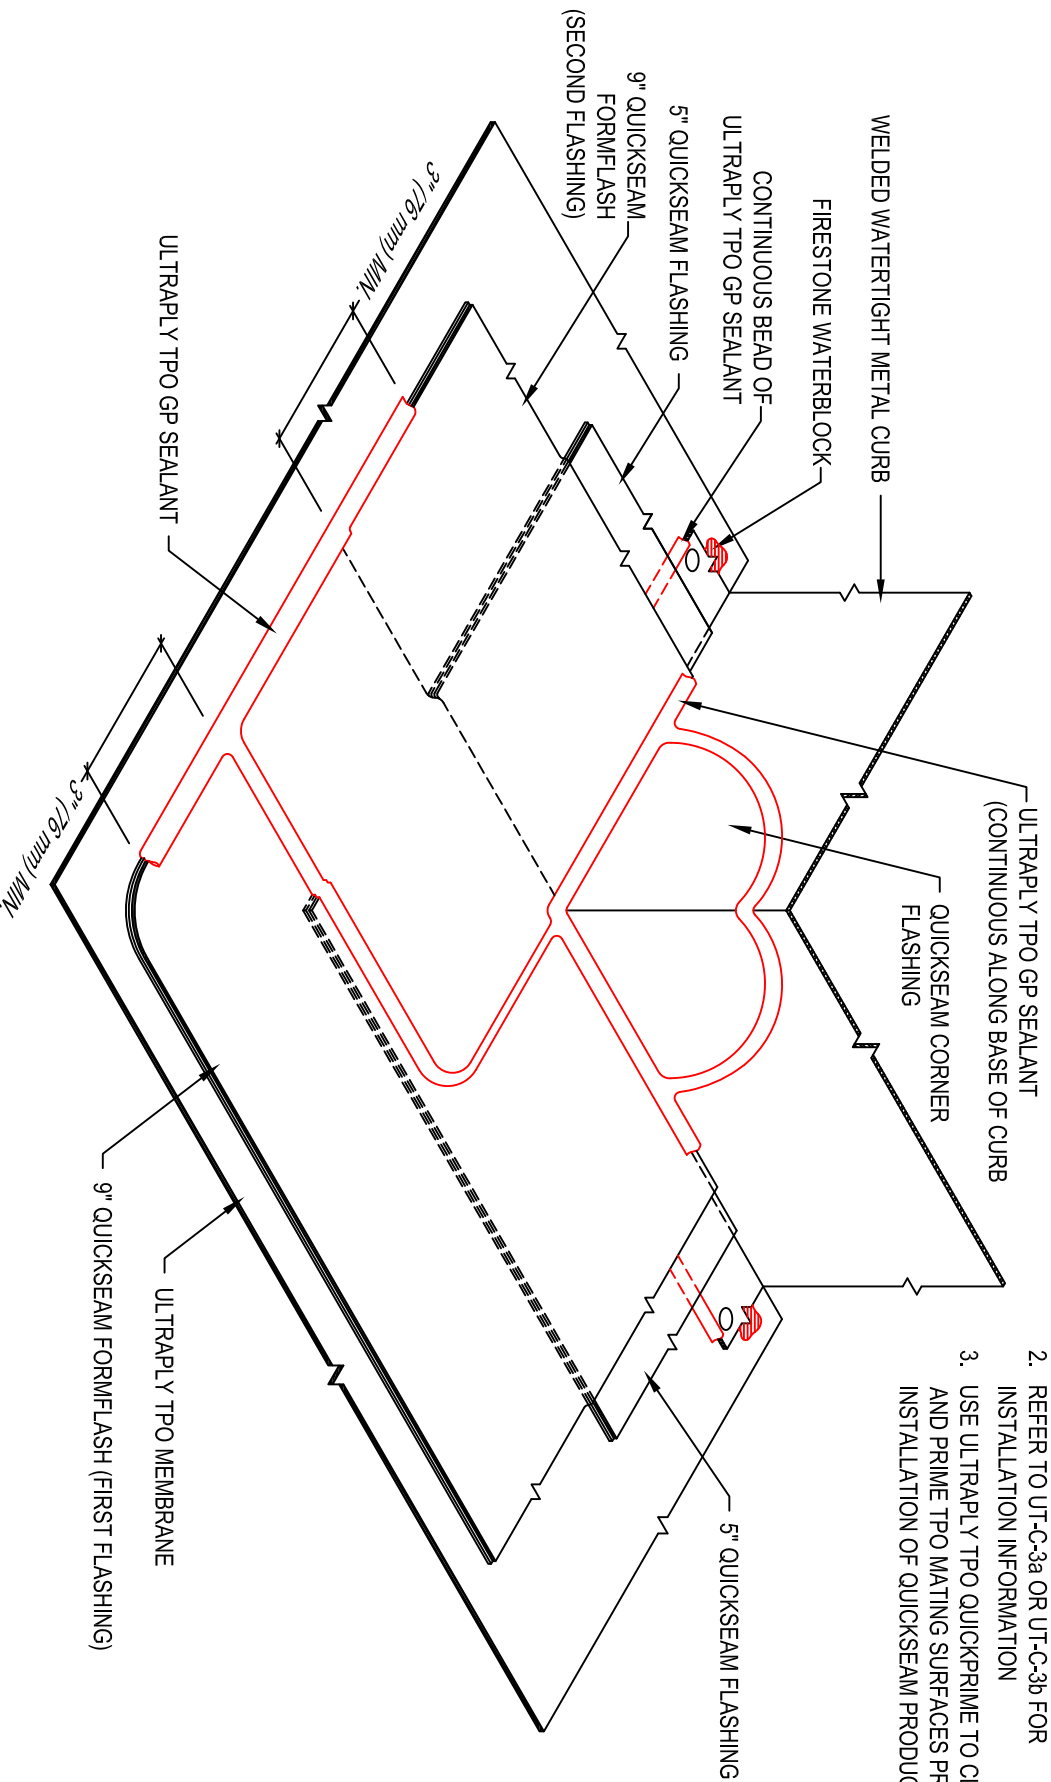

**OUTSIDE CORNER AT WELDED WATERTIGHT CURB  
(FLANGES 2"-3")**

ULTRAPLY™ TPO

ACCEPTABLE SYSTEMS: ALL

MAXIMUM WARRANTY: **15 YEARS**

ISSUE / REVISION  
DATE:

7/01/2014

NOT TO SCALE

DETAIL NO.

**UT-C-3**