


- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR MOST CURRENT INFORMATION.
  2. USE ULTRAPLY TPO QUICKPRIME TO CLEAN AND PRIME TPO MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

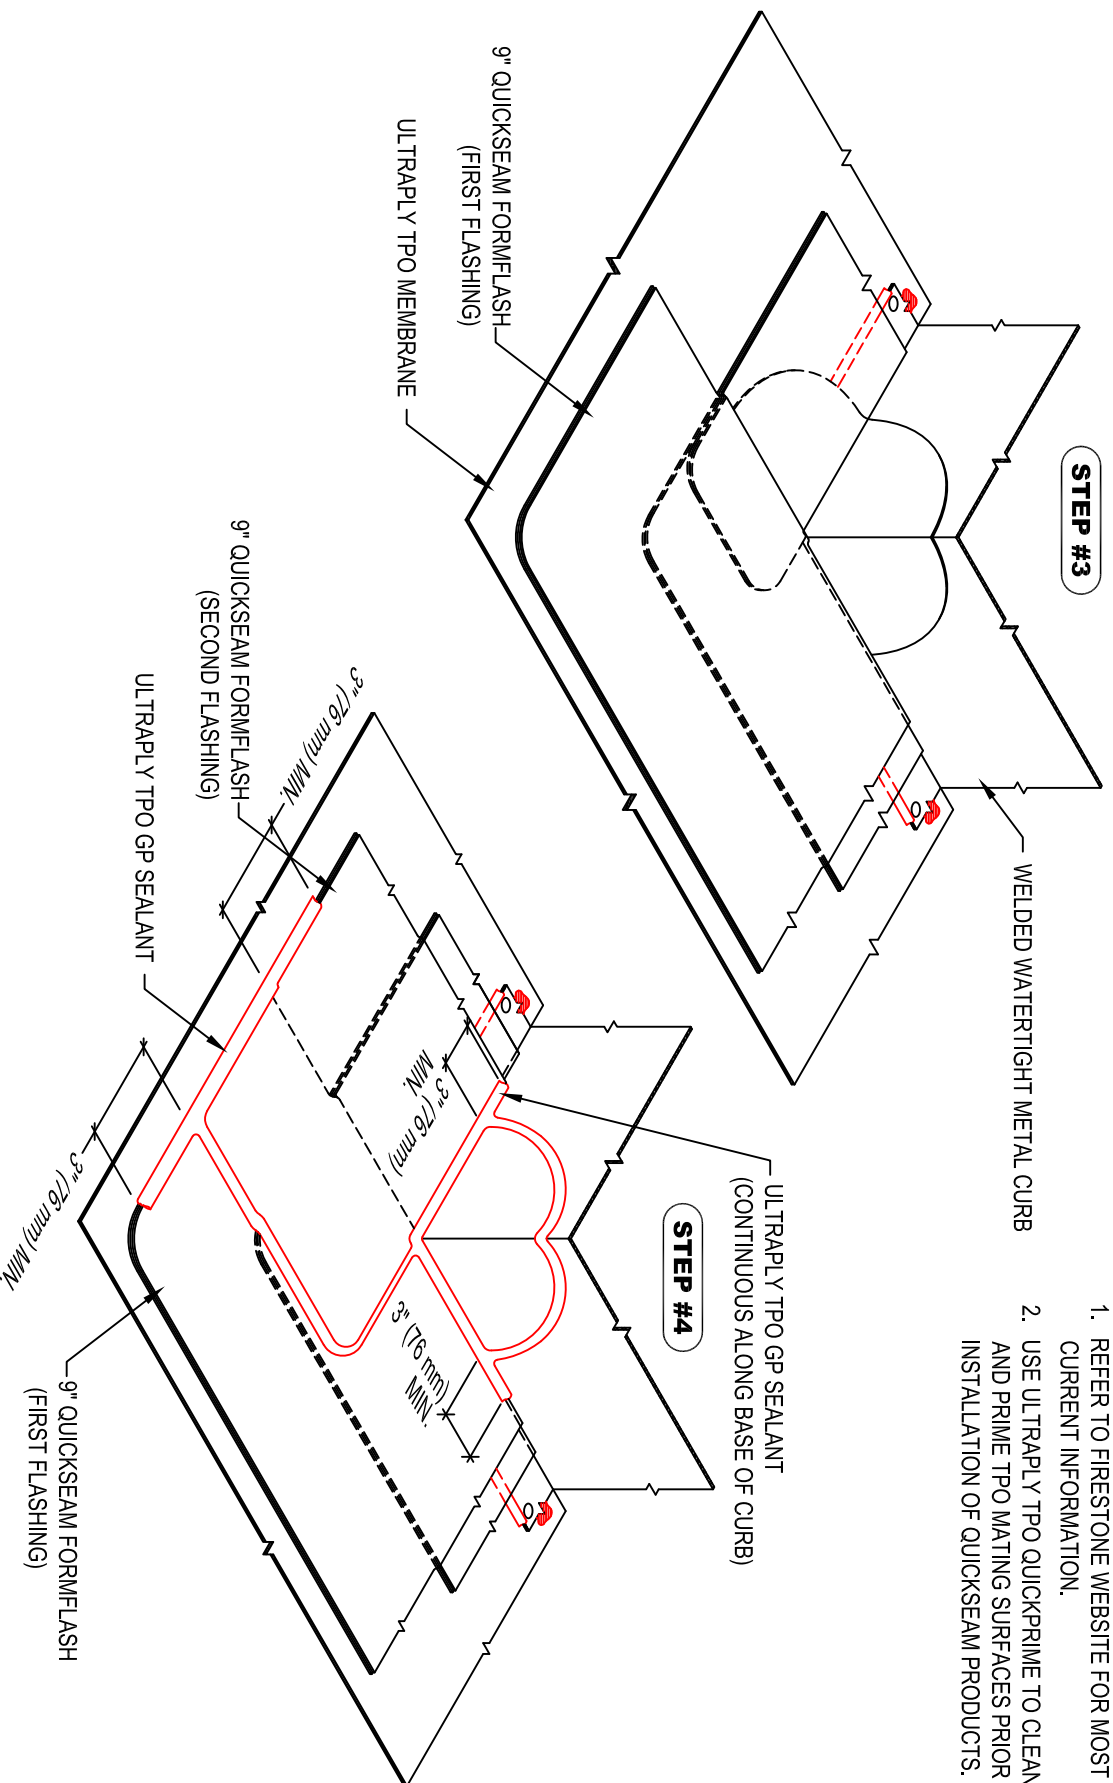

MAXIMUM WARRANTY: **15 YEARS**

DETAIL NO.

**UT-C-3b**

ISSUE / REVISION

DATE:

7/01/2014

NOT TO SCALE

**OUTSIDE CORNER AT WELDED WATERTIGHT CURB  
(FLANGES 2"-3") INSTALLATION STEPS 3 & 4**

ULTRAPLY™ TPO

ACCEPTABLE SYSTEMS: ALL

**Firestone**  
BUILDING PRODUCTS  
NOBODY COVERS YOU BETTER.™  
www.firestoneppco.com