



STEP #1

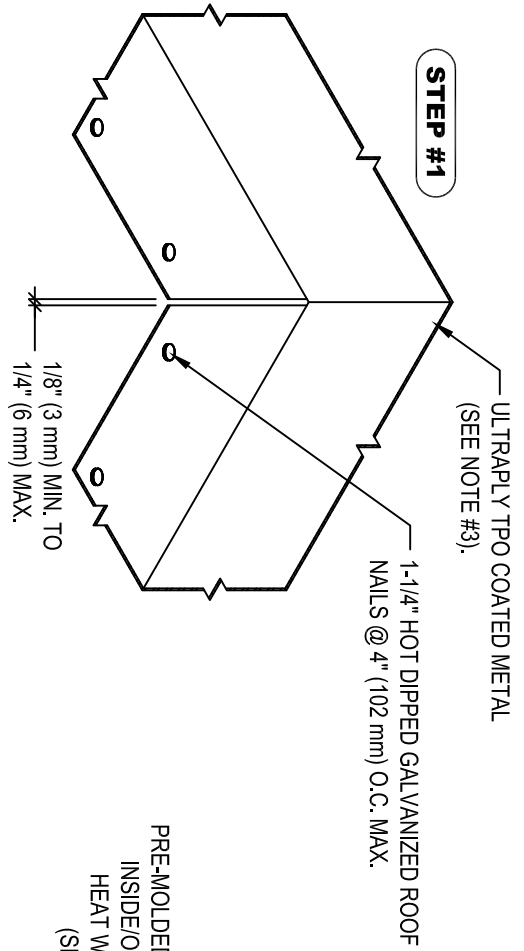


ULTRAPLY TPO MEMBRANE HEAT WELDED TO ULTRAPLY TPO COATED METAL (SEE NOTE #2 & #5)

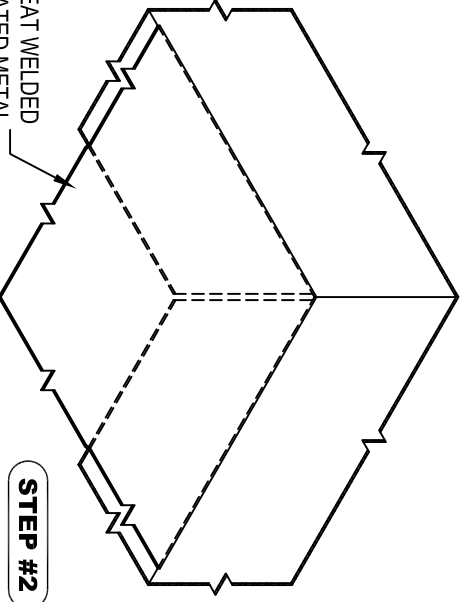

STEP #2

PRE-MOLDED ULTRAPLY TPO INSIDE/OUTSIDE CORNER HEAT WELDED IN PLACE (SEE NOTE #4 & #5)

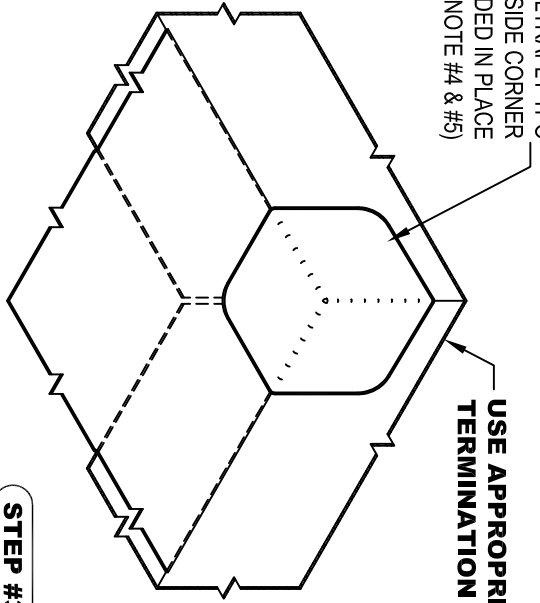

STEP #3

- NOTES:
1. REFER TO FIRESTONE WEBSITE FOR MOST CURRENT INFORMATION.
 2. REFER TO UT-LS-1 OR UT-LS-2 FOR WELD WIDTH, INSTALL METAL WORK TO SMACNA RECOMMENDATIONS.
 3. INSTALL METAL WORK TO SMACNA RECOMMENDATIONS.
 4. ULTRAPLY TPO FLASHING (UNSUPPORTED) MAY BE USED IN LIEU OF PRE-MOLDED ULTRAPLY TPO INSIDE/OUTSIDE CORNER **FOR A MAXIMUM WARRANTY OF 15 YEARS.**
 5. WHEN REINFORCEMENT OF TPO MEMBRANE IS EXPOSED, REFER TO UT-LS-14 FOR CUT EDGE SEALANT APPLICATION.