


**PLAN VIEW
PIPE FLASHING OVER
FIELD SEAM**

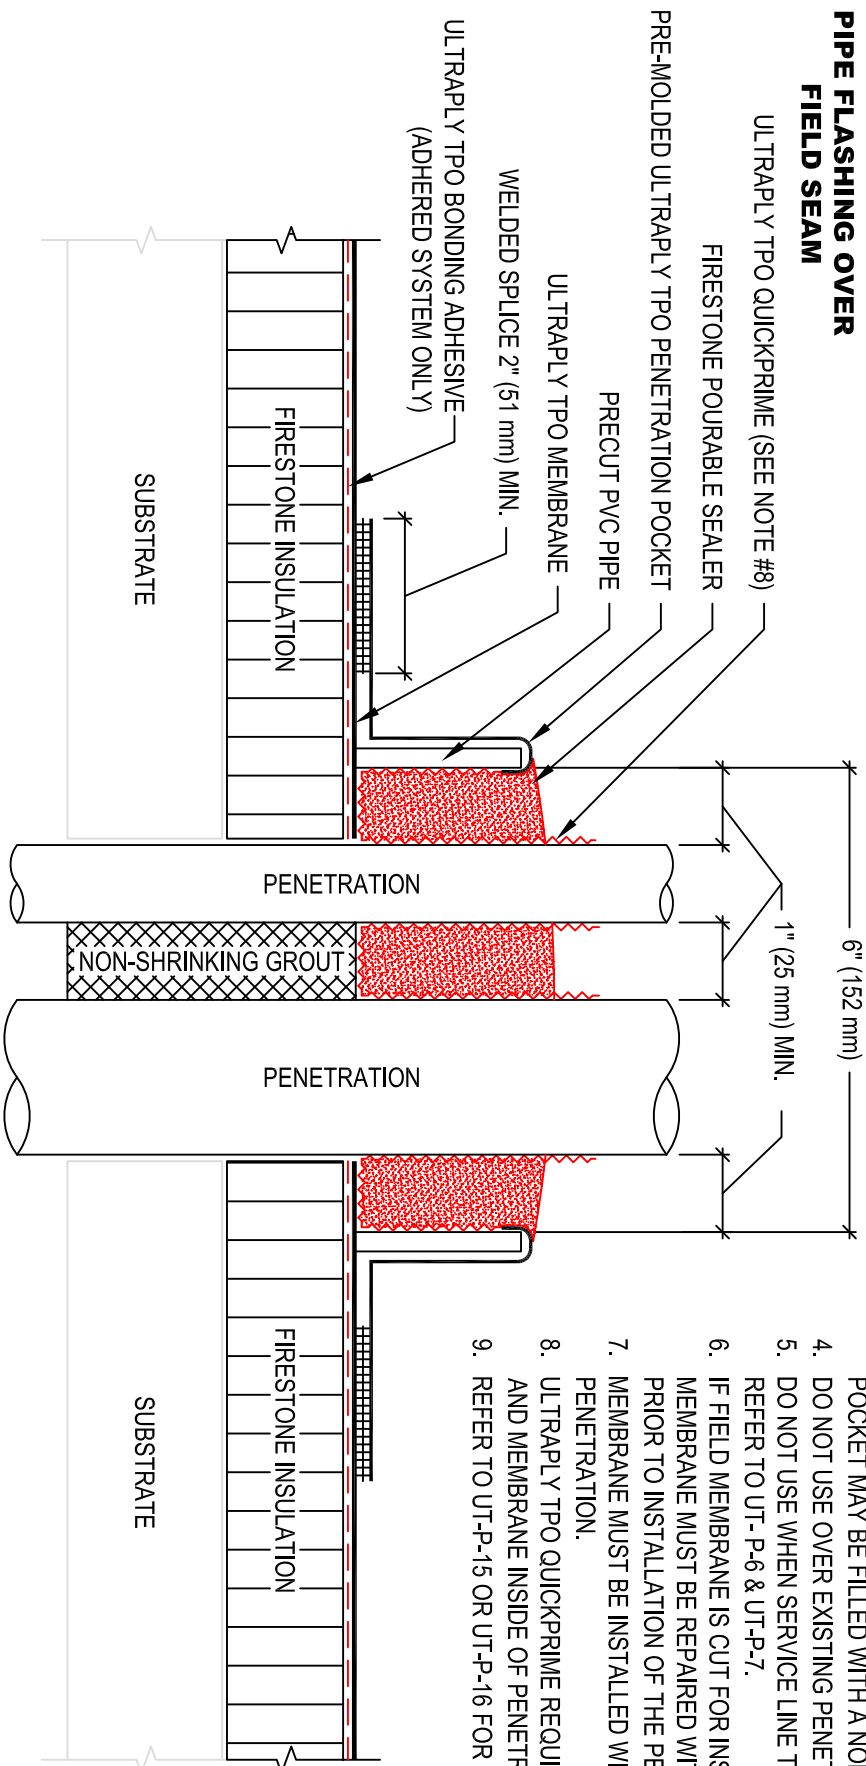

- NOTES:**
1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
 2. REMOVE ALL EXISTING FLASHING, LEAD, ETC. PIPE SURFACE MUST BE FREE OF ALL RUST, GREASE, INSULATION, ETC.
 3. FIRESTONE POURABLE SEALER MOUNTED TO SHED WATER (MINIMUM DEPTH OF 2" (51 mm), REMAINDER OF POCKET MAY BE FILLED WITH A NON-SHRINKING GROUT.
 4. DO NOT USE OVER EXISTING PENETRATION POCKETS.
 5. DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 180°F. REFER TO UT-P-6 & UT-P-7.
 6. IF FIELD MEMBRANE IS CUT FOR INSULATION, THE MEMBRANE MUST BE REPAIRED WITH TPO MEMBRANE PRIOR TO INSTALLATION OF THE PENETRATION POCKETS.
 7. MEMBRANE MUST BE INSTALLED WITHIN 1/2" (13 mm) OF PENETRATION.
 8. ULTRAPLY TPO QUICKPRIME REQUIRED ON PENETRATIONS AND MEMBRANE INSIDE OF PENETRATIONS.
 9. REFER TO UT-P-15 OR UT-P-16 FOR MAS.

Firestone
BUILDING PRODUCTS
NOBODY COVERS YOU BETTER.™
www.firestonebpco.com

PENETRATION WITH TPO PENETRATION POCKET KIT
ULTRAPLY™ TPO
ACCEPTABLE SYSTEMS: ALL

ISSUE / REVISION
DATE: 4/7/2017

DETAIL NO.
UT-P-8

MAXIMUM WARRANTY: **20 YEARS**