


NOTES:

1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
2. REMOVE ALL EXISTING FLASHING, LEAD, ETC. PIPE SURFACE MUST BE FREE OF ALL RUST, GREASE, INSULATION, ETC.
3. PIPE MUST BE ANCHORED TO ENSURE STABILITY.

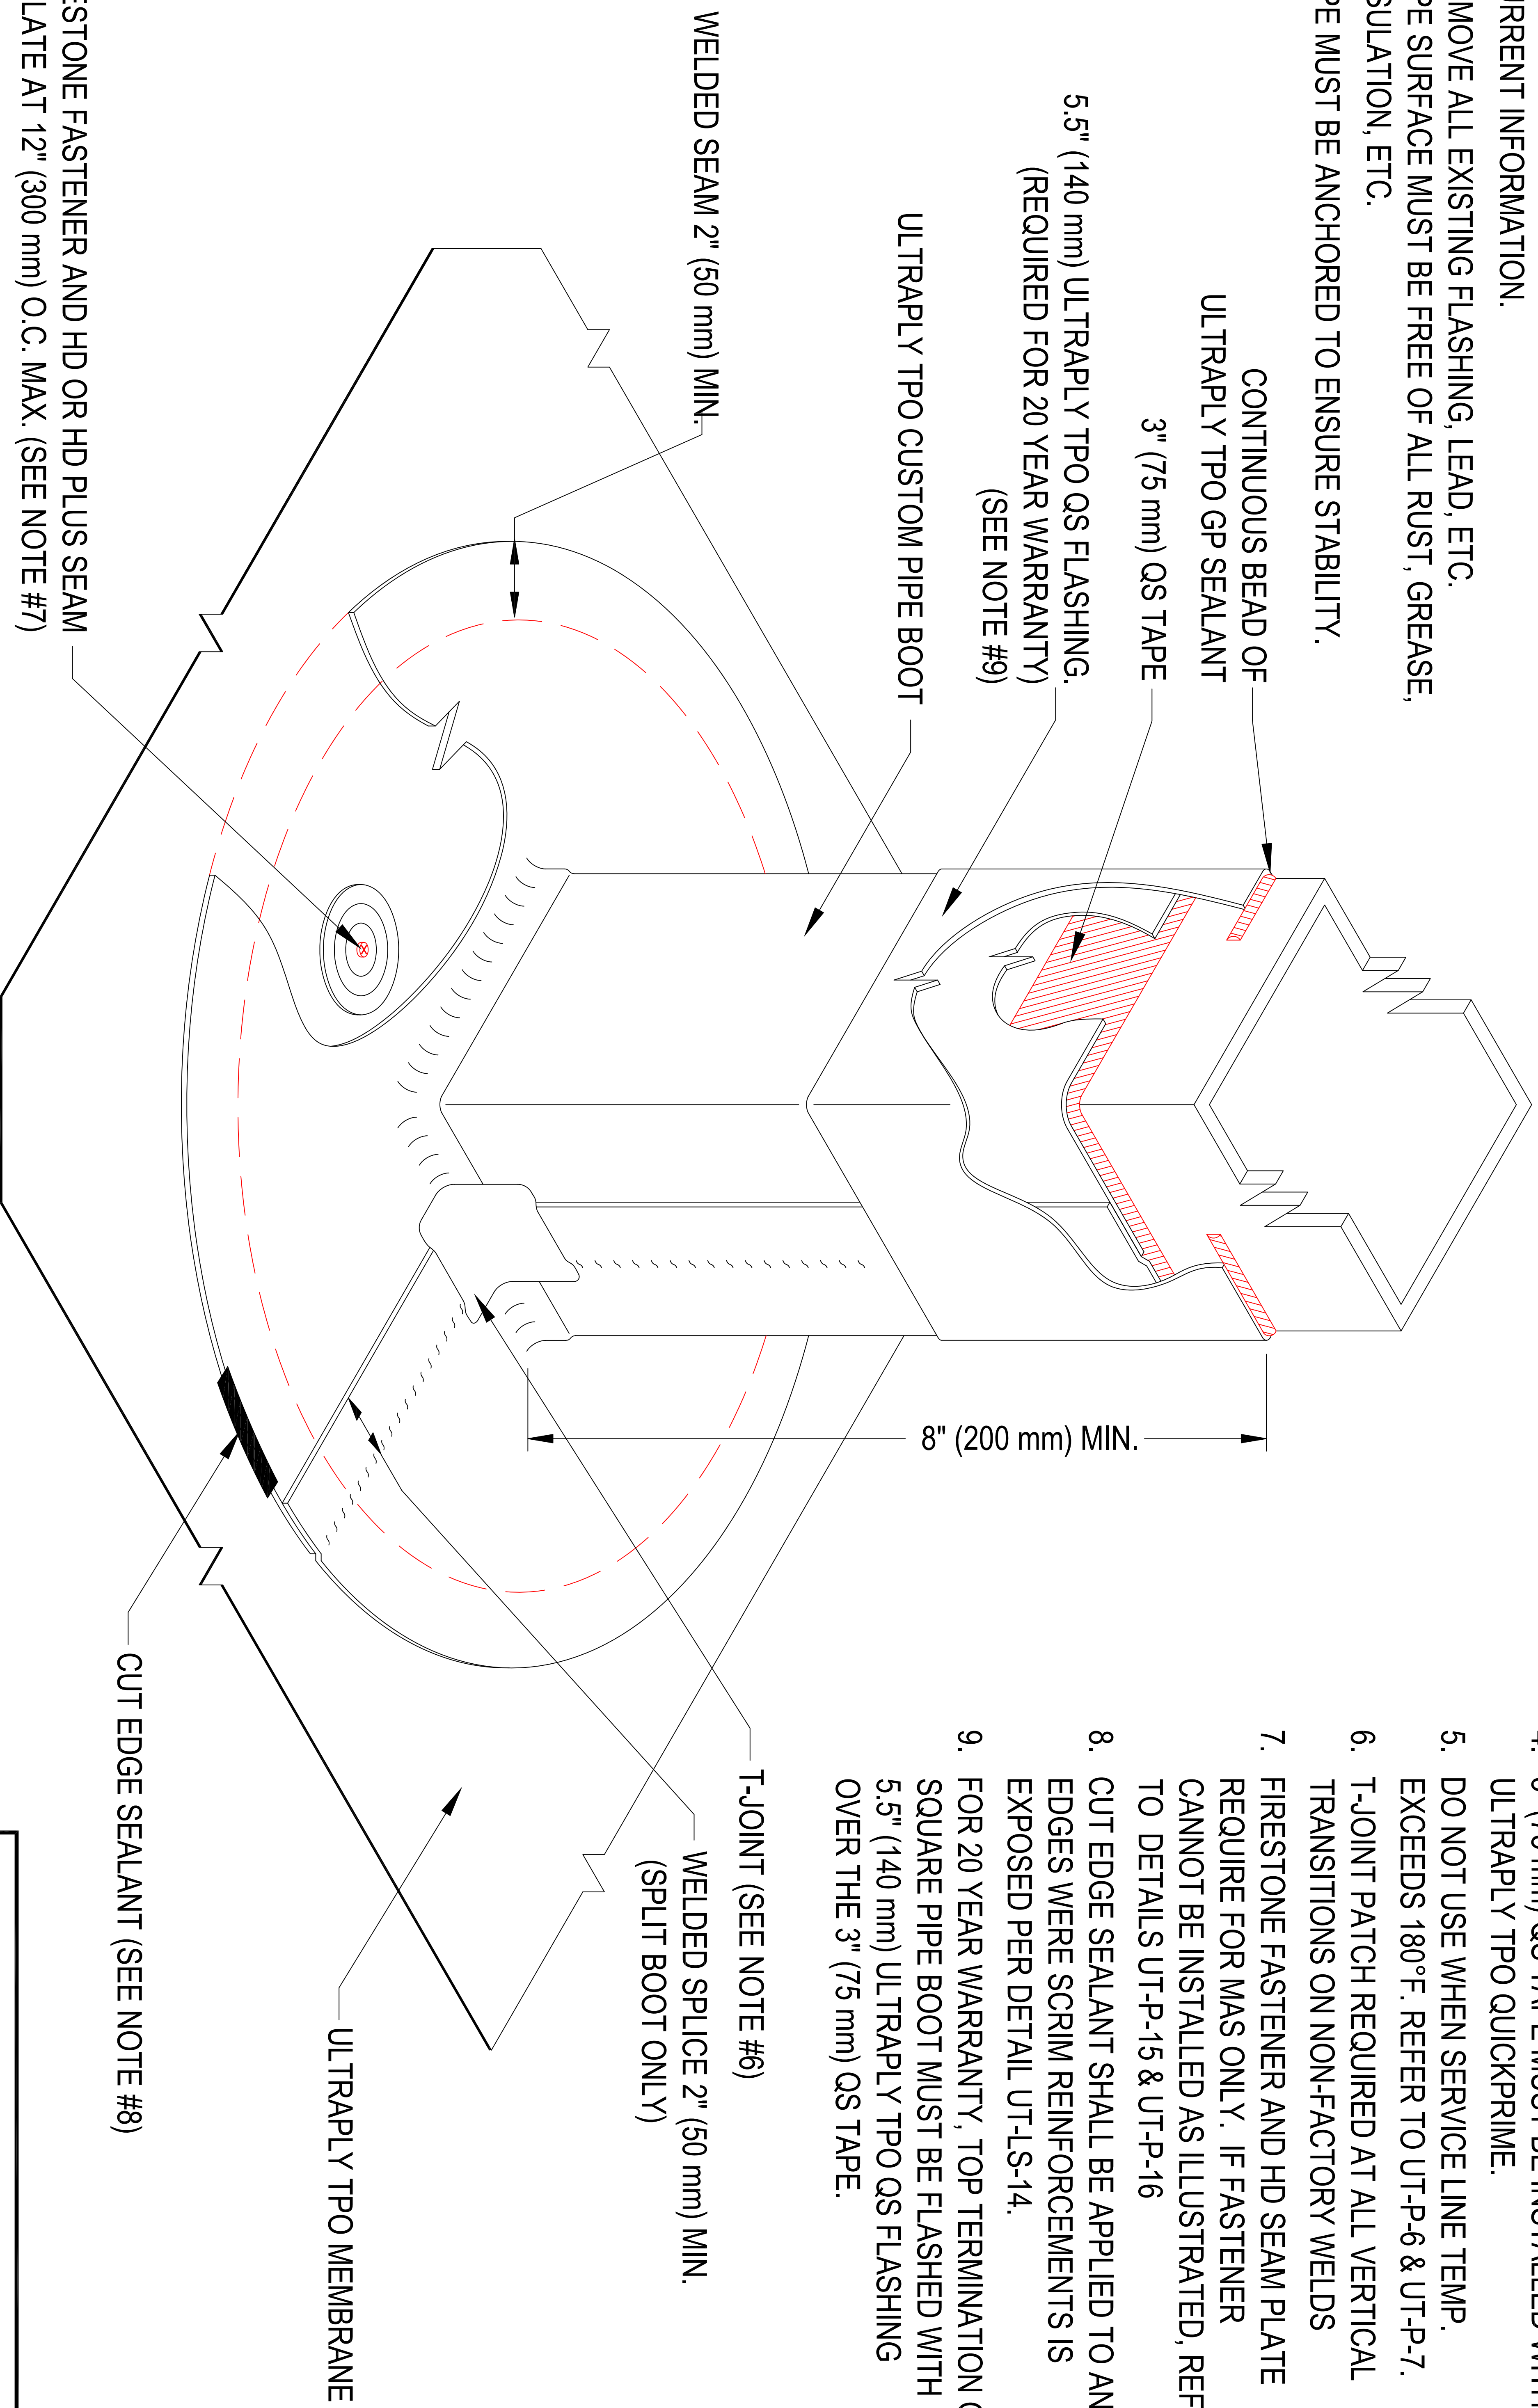

NOTES

4. 3" (75 mm) QS TAPE MUST BE INSTALLED WITH ULTRAPLY TPO QUICKPRIME.
5. DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 180°F. REFER TO UT-P-6 & UT-P-7.
6. T-JOINT PATCH REQUIRED AT ALL VERTICAL TRANSITIONS ON NON-FACTORY WELDS
7. FIRESTONE FASTENER AND HD SEAM PLATE REQUIRE FOR MAS ONLY. IF FASTENER CANNOT BE INSTALLED AS ILLUSTRATED, REFER TO DETAILS UT-P-15 & UT-P-16
8. CUT EDGE SEALANT SHALL BE APPLIED TO ANY EDGES WERE SCRIM REINFORCEMENTS IS EXPOSED PER DETAIL UT-LS-14.
9. FOR 20 YEAR WARRANTY, TOP TERMINATION OF SQUARE PIPE BOOT MUST BE FLASHED WITH 5.5" (140 mm) ULTRAPLY TPO QS FLASHING OVER THE 3" (75 mm) QS TAPE.

MAXIMUM WARRANTY: **20 YEARS**

Firestone
 BUILDING PRODUCTS
NOBODY COVERS YOU BETTER.™
 www.firestonebpco.com

SQUARE PENETRATION WITH SQUARE ULTRAPLY TPO CUSTOM PIPE BOOT
 ULTRAPLY™ TPO
 ACCEPTABLE SYSTEMS: ALL

ISSUE / REVISION DATE: 7/22/2014	DETAIL NO. UT-P-18
NOT TO SCALE	