


- NOTES
- DO NOT USE WHEN SERVICE LINE TEMP. EXCEEDS 160°F. REFER TO UT-P-6 & UT-P-7.
 - T-JOINT PATCH REQUIRED AT ALL VERTICAL TRANSITIONS ON NON-FACTORY WELDS
 - FIRESTONE FASTENER AND HD SEAM PLATE REQUIRE FOR MAS ONLY. IF FASTENER CANNOT BE INSTALLED AS ILLUSTRATED, REFER TO DETAILS UT-P-15 & UT-P-16
 - CUT EDGE SEALANT SHALL BE APPLIED TO ANY EDGES WHERE SCRIM REINFORCEMENTS IS EXPOSED PER DETAIL UT-LS-14.

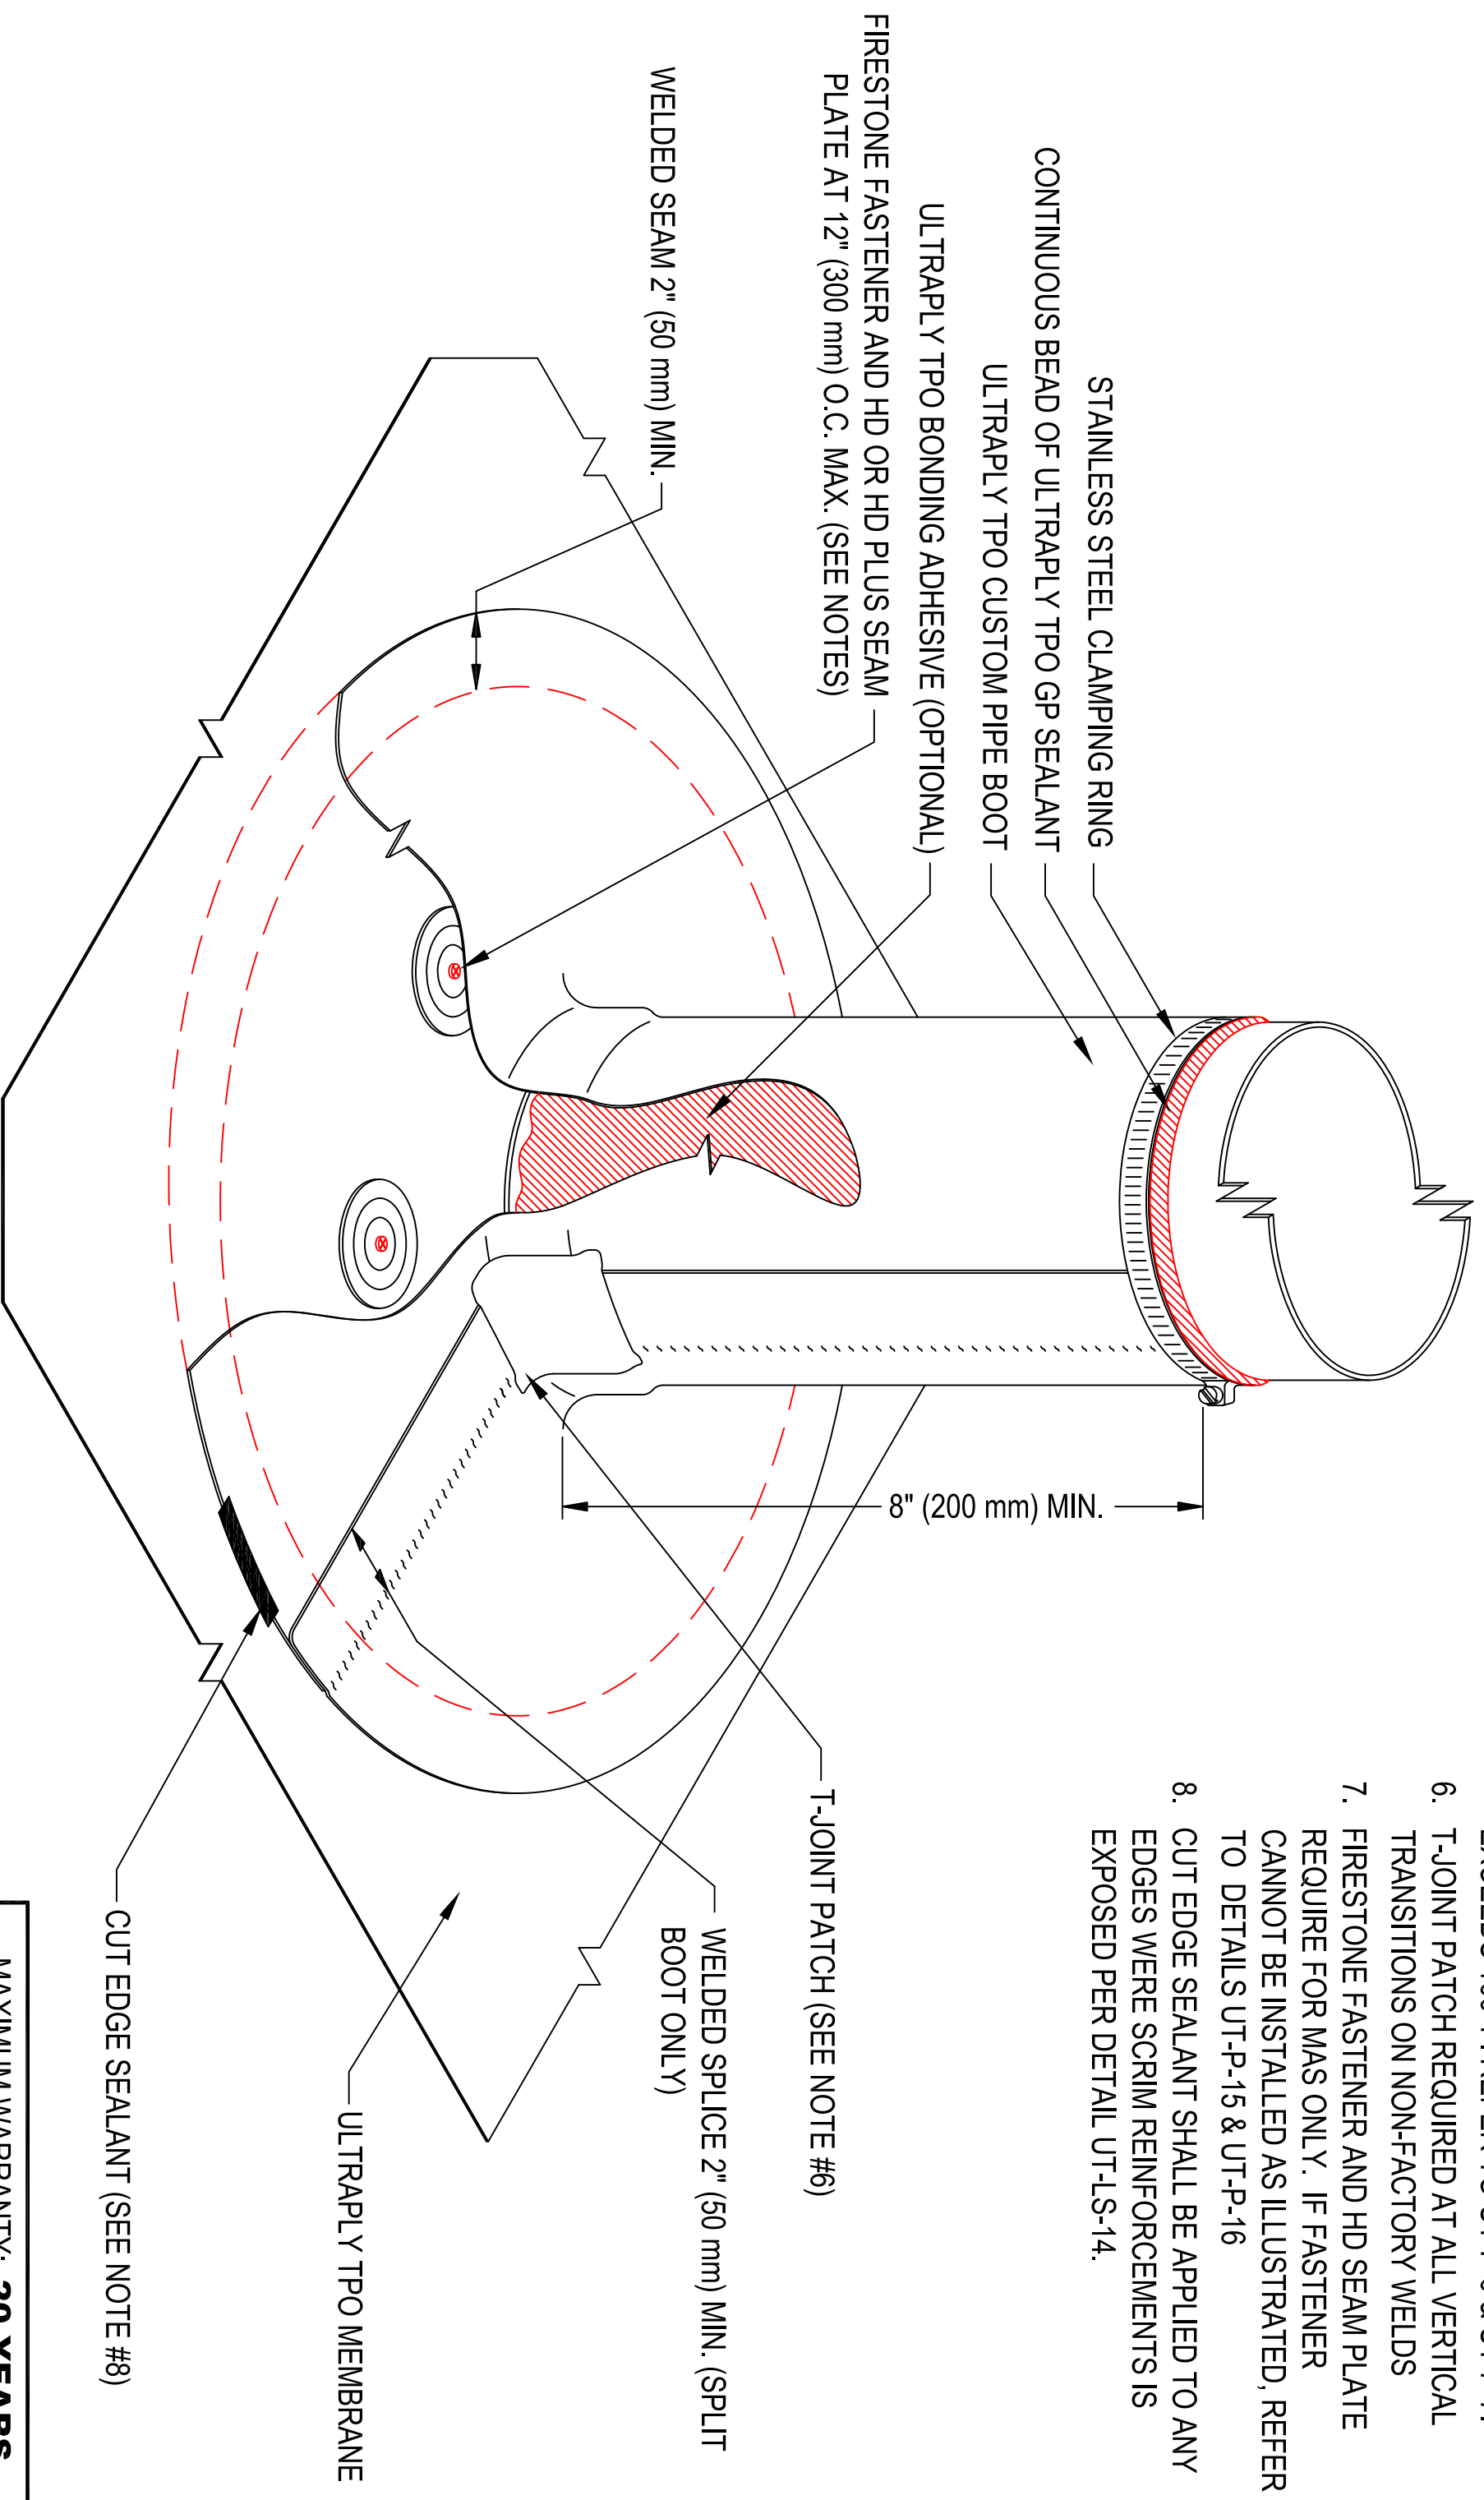

MAXIMUM WARRANTY: **20 YEARS**