


**STEP #1**

**USE APPROPRIATE TERMINATION**

- ULTRAPLY TPO MEMBRANE
- APPROPRIATE FASTENER 4" (102mm) O.C. MAX
- NON-WELDED METAL SCUPPER SLEEVE (SEE NOTE #2)
- CONTINUOUS BEAD OF FIRESTONE WATERBLOCK

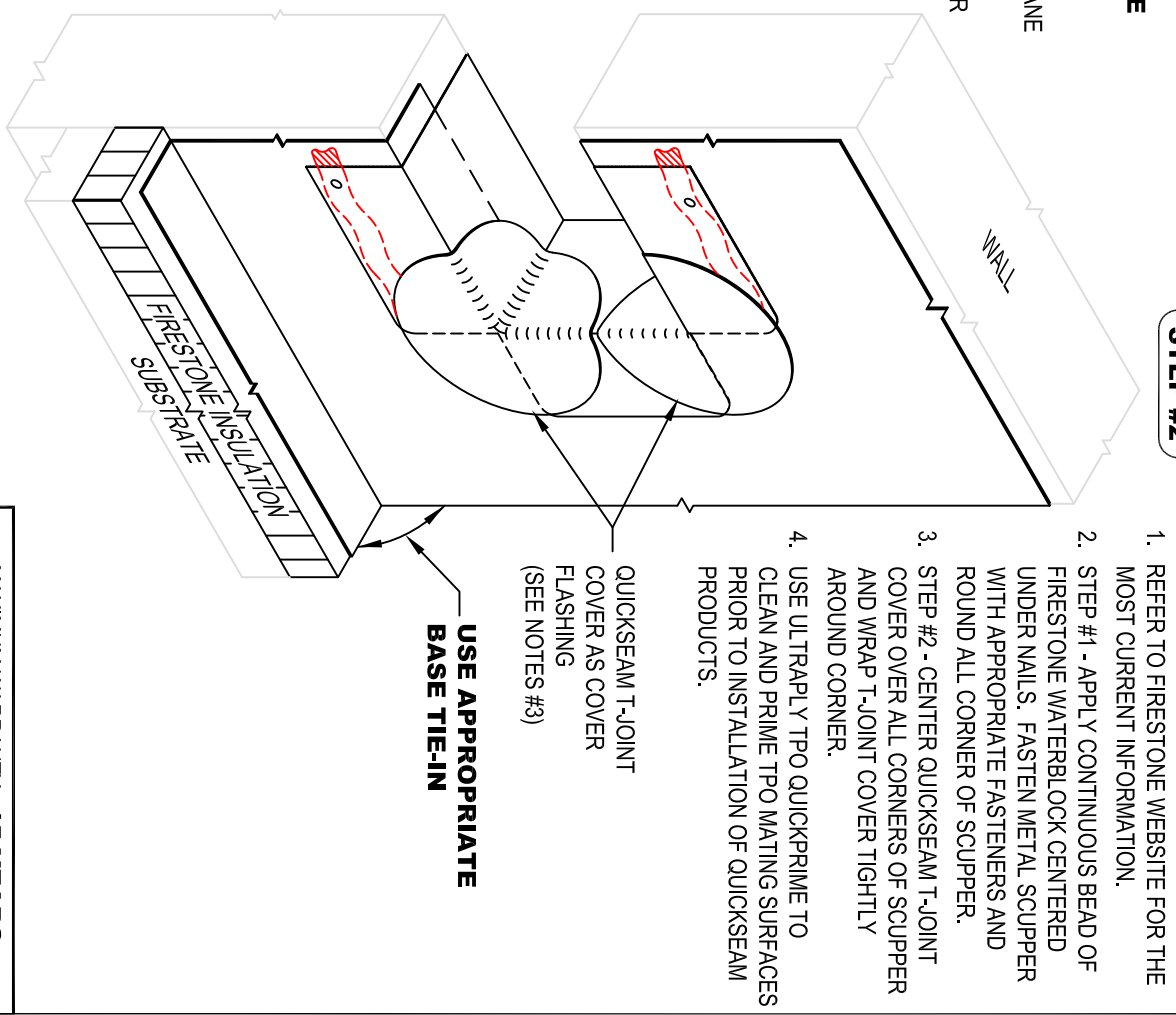

**STEP #2**

**NOTES:**

1. REFER TO FIRESTONE WEBSITE FOR THE MOST CURRENT INFORMATION.
2. STEP #1 - APPLY CONTINUOUS BEAD OF FIRESTONE WATERBLOCK CENTERED UNDER NAILS. FASTEN METAL SCUPPER WITH APPROPRIATE FASTENERS AND ROUND ALL CORNER OF SCUPPER.
3. STEP #2 - CENTER QUICKSEAM T-JOINT COVER OVER ALL CORNERS OF SCUPPER AND WRAP T-JOINT COVER TIGHTLY AROUND CORNER.
4. USE ULTRAPLY TPO QUICKPRIME TO CLEAN AND PRIME TPO MATING SURFACES PRIOR TO INSTALLATION OF QUICKSEAM PRODUCTS.

QUICKSEAM T-JOINT COVER AS COVER FLASHING (SEE NOTES #3)

**USE APPROPRIATE BASE TIE-IN**

**OVERFLOW THRU-WALL SCUPPER (NON-WELDED SLEEVE) INSTALLATION STEPS 1 & 2**

ULTRAPLY<sup>™</sup> TPO

ACCEPTABLE SYSTEMS: ALL

MAXIMUM WARRANTY: **15 YEARS**

ISSUE / REVISION DATE:

7/22/2014

NOT TO SCALE

DETAIL NO.

**UT-S-4a**