

TECHNICAL INFORMATION SHEET

UltraPly™ TPO Custom Pipe Boots

TIS #217

Description:

UltraPly TPO Custom Pipe Boots are part of the Firestone UltraPly Custom Accessory Program. This program is designed to reduce time-consuming field fabrication by providing custom fitted accessories with welds made in factory conditions. The UltraPly TPO Custom Pipe Boots are designed in a variety of shapes to allow the flashing of round and square roof penetrations. The TPO Custom Pipe Boots are non-adjustable pipe boots which custom fit the roof penetration being flashed. This labor-saving product is made from standard, reinforced UltraPly TPO membrane. The UltraPly TPO Custom Pipe Boots are available in three different designs (square, round and conical) and each design is available with or without a split to allow application of the pipe boot when the pipe boot cannot slip over the top of the roof penetration. UltraPly TPO Custom Pipe Boots are available in White, Tan or Gray.



Method of Application:

1. Refer to Firestone Technical Database at www.Firestonebpc.com for all current details and requirements.
2. Ensure substrate is clean and clear of any dirt, debris or other contaminants.
3. Position the pipe boots in place and verify that the correct size is being used and there is enough overlap on the split to allow a 2" weld.
4. Weld pipe boots in place, ensuring a 2" weld along perimeter and along the split if the split pipe boot configuration is being used.
5. Refer to the detail drawings for proper termination and installation details.

Storage:

- Store material in its original unopened packaging away from sources of physical damage or chemical contamination.

Precautions:

- Exercise caution when lifting, moving, transporting storing or handling UltraPly TPO Custom Pipe Boots to avoid sources of punctures, physical damage or chemical contamination.
- Contact your Firestone Technical Coordinator at 1-800-428-4511 for specific recommendations regarding chemical or waste product compatibility.
- Details and installation details can be found on the Firestone Technical Database located at www.Firestonebpc.com.
- Refer to Material Safety Data Sheet for ReflexEON TPO systems.


Product Data:

Information


All UltraPly TPO Custom Pipe Boots designs are available as a continuous pre-welded boot or with a split for ease of application around penetrations that do not allow pipe boot to slip over the top of the roof penetration.

Available Pipe Boot Designs


Round Pipe Boot:

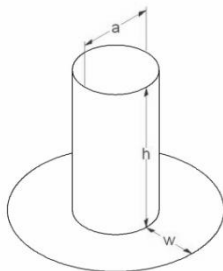

Conical Pipe Boot:

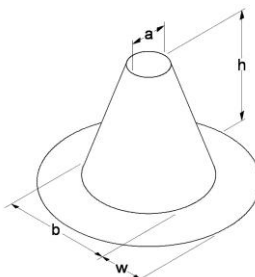

Square Pipe Boot:

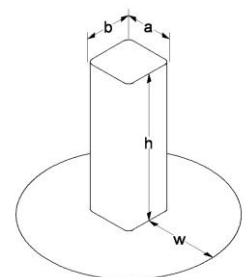

Please Contact your Firestone Technical Coordinator at 1-800-428-4511 for further information.

This sheet is meant to highlight Firestone products and specifications and is subject to change without notice. Firestone takes responsibility for furnishing quality materials which meet published Firestone product specifications. Neither Firestone nor its representatives practice architecture. Firestone offers no opinion on and expressly disclaims any responsibility for the soundness of any structure. Firestone accepts no liability for structural failure or resultant damages. Consult a competent structural engineer prior to installation if the structural soundness or structural ability to properly support a planned installation is in question. No Firestone representative is authorized to vary this disclaimer.